

**CABINET DOOR STYLES—AMBASSADOR, ACADEMY, COSMOPOLITAN, CAVALIER**



**F - Full glass with pull**

**G - Full glass with pull & Saf-T-Lok™**

**V - Vertical duo with pull**

**W - Vertical duo with pull & Saf-T-Lok™**


**S21- Solid with pull**

**L22 - Solid with pull & Saf-T-Lok™**

**D - Horizontal duo with pull**

**B10 - Solid with pull, view window & Saf-T-Lok™**

E.G. L22, W, 3 & B10 Door Styles w SAF-T-LOK™

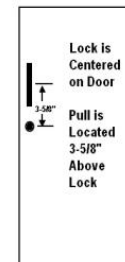

**Note:** If lock option is selected, lock is centered vertically on door, and the center of the handle will be 3-5/8" above the lock unless recessed pull is used (Standard on ADA XXX2 series doors). Recessed pulls are always centered vertically next to lock.



**F - Full glass with recessed pull (Std. on ADA doors)**

**G - Full glass with Saf-T-Lok & recessed pull (Std. on ADA doors)**

**V - Vertical duo & recessed pull (Std. on ADA doors)**

**W - Vertical duo with Saf-T-Lok & recessed pull (Std. on ADA doors)**

**S21 Door with recessed pull (Std. on ADA doors)**

**L22 - Solid with Saf-T-Lok & recessed pull (Std. on ADA doors)**

**E - Horizontal duo with pull & Saf-T-Lok**

**L24 Solid with cylinder key lock & no pull**

**Please allow for this when positioning cabinet for installation.**

|  |   |
|--|---|
|  | <p><b>CABINET DOOR STYLES</b></p> <p><b>NOTE: 4" TRIM STYLE (12, 22, 32) HAS RECESSED PULL</b></p> <p>5/13/2016</p> |
|--|---|



**FOR MORE INFORMATION CALL 1-888-926-1365**

**Superior Specialty Supply • 9 Council Drive • PO Box 417 • Woodsboro, MD 21798 • www.sssupply.com**

**CABINET GLAZING —AMBASSADOR, ACADEMY, COSMOPOLITAN, CAVALIER, CROWLINE**



10 CLEAR ACRYLIC  
17 CLEAR TEMPERED  
18 LAMINATED SAFETY GLASS



15 BRONZE ACRYLIC  
COMPLETELY  
OBSCURES CONTENTS




16 GRAY ACRYLIC  
SHADES VIEW OF  
CONTENTS




13 CLEAR WIRE GLASS  
WITH SAFETY FILM

**ADA MOUNTING HEIGHT**

Door with Standard Pull Centered & No Lock - F, S, V, D  
Or Any Door with Flush Pull - Lock or No Lock


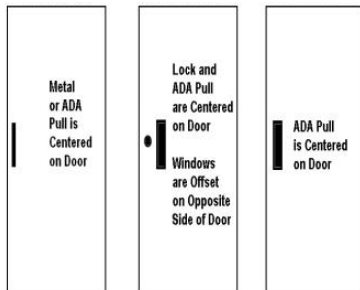


**Calculate Bottom Edge of Wall Opening to Have Door Pull Centered at 48" AFF:**  
48" minus (Wall Opening Height Divided by 2).  
Example for 1017F10:  $48" - (25" \div 2) = 35.5"$  AFF

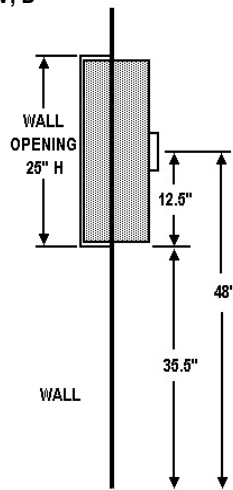

Example for 24" High Non FX Cabinet

Door with Standard Pull & Lock - E, G, W, & B10

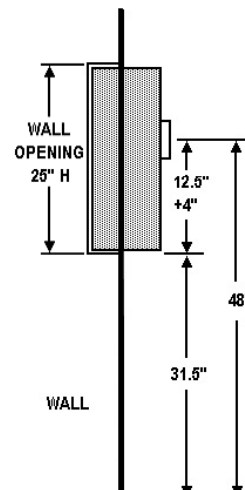

**Calculate Bottom Edge of Wall Opening to Have Door Pull Centered at ~ 48" AFF:**  
44" minus (Wall Opening Height Divided by 2).  
Example for 1017G10:  $44" - (25" \div 2) = 31.5"$  AFF



**FOR MORE INFORMATION CALL 1-888-926-1365**

Superior Specialty Supply • 9 Council Drive • PO Box 417 • Woodsboro, MD 21798 • [www.sssupply.com](http://www.sssupply.com)