

# Installing Stealth Panels




1. Frame the opening.



2. Mount Stealth surround with drywall screws.



3. Install drywall and place access panel in opening.

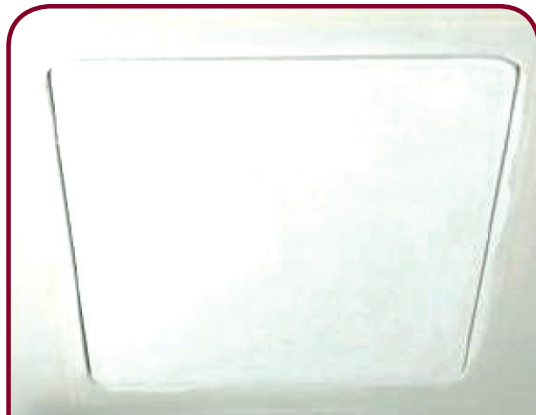

4. Tape, apply drywall compound, finish and paint.



FOR MORE INFORMATION CALL 1-888-926-1365  
Superior Specialty Supply • 9 Council Drive • PO Box 417 • Woodsboro, MD 21798 • [www.sssupply.com](http://www.sssupply.com)